

sprout™

INSTRUCTION MANUAL

Nomad Tempo Bluetooth Speaker



A woman with long brown hair is sitting on a dark grey sofa, smiling and reading a book. She is wearing a white top. To her left is a large green plant with broad leaves. The background is a light-colored wall. The overall scene is warm and cozy.

sprout™

Sprout is proud to be an Australian owned brand. Starting small in 2011, we are now one of the largest single-branded accessory providers in Australia. We have an extensive range that highlights our pursuit of innovation across a growing number of technology categories.

Our mission is to inspire new and better experiences, by designing products that enhance your digital life.

CONTENT

01. WHAT'S IN THE BOX?	04
02. PRODUCT OVERVIEW	05
03. QUICK START GUIDE	06
04. EXTRA CONTROLS	08
05. SPECIFICATIONS	10
06. CARE AND MAINTENANCE	12
07. IMPORTANT SAFETY INFO	13
08. CONSUMER GUARANTEE	14



Scan the QR code
to access an online
version of this manual



01. What's in the box?

Thank you for choosing our
Nomad Tempo Bluetooth Speaker.

For optimum performance and safety,
please read instructions carefully before usage.

 
 
 
Please keep this manual for future reference.

- 1x Nomad Tempo Bluetooth Speaker
- 1x USB Type-A to Micro-USB charging cable
- 1x Aux-in audio cable
- 1x Wrist strap
- 1x Product manual

02.

Product Overview

1. Button control panel
2. Dust proof/waterproof cover
3. Wrist strap loop
4. Power
5. Bluetooth/UNISYNC
6. Volume control
7. Play/Pause/Answer
8. Aux-in port
9. Micro-USB port
10. LED indicator

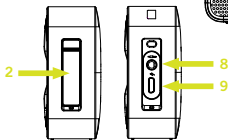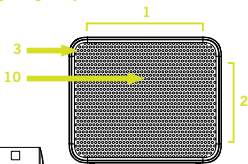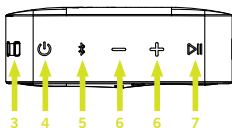

03.

Quick Start Guide

Power

Press the power button for 3 seconds to turn Tempo on or off. The Tempo's Bluetooth pairing will start automatically.

Nomad Tempo will remember the last device paired and if the device is within Bluetooth range, the Nomad Tempo will automatically search & pair with the device.

Play/Pause/Answer

Press the play/pause/answer button to play or pause song tracks and answer mobile phone calls.

Volume control

Short press '-' button to decrease volume.

Short press '+' button to increase volume.

Track control

Long press '-' button to select previous song track.

Long press '+' button to select next song track.

Input Functions

Aux-in

Aux-in provides an alternative to Bluetooth and allows Nomad Tempo to connect to your mobile phone/music device by using a 3.5mm auxiliary cable.

Micro-USB

To charge your Nomad Tempo, connect the provided USB cable to Micro-USB input 5V/1A.

Charging your Nomad Tempo Bluetooth Speaker

1. Connect the Micro-USB into Nomad Tempo input 5V/1A and connect the other end of cable into a power source*.
2. LED will be solid red, red light will turn off when fully charged**.

*Power source options include USB connection to a Sprout AC power adapter, a Sprout car charger or computer/notebook USB connection.

**Full charge will take about 2.5 to 3 hours.

Bluetooth pairing

1. Press the power button for approximately 3 seconds. The Nomad Tempo LED will flash blue/red*, indicating the Nomad Tempo is ready for pairing.
2. Turn on Bluetooth function on your mobile phone/music device.**
3. 'Nomad Tempo' will appear on your mobile phone/music Bluetooth list. Select 'Nomad Tempo' to pair.
4. Once your mobile phone/music device is connected to Nomad Tempo, you will hear 'Bluetooth connected'.

*If LED is not flashing blue/red, long press power button for 3 seconds.

**If you are not familiar with Bluetooth pairing for your mobile phone or music device, refer to the user guide for your mobile phone/music device for instructions to pair a new device by using Bluetooth.

UNISYNC mode

If you are using the UNISYNC feature you can connect one Nomad Tempo as a primary, then connect up to 50 UNISYNC devices as replicas.

To connect a replica, short press the UNISYNC button on your primary device once to enter UNISYNC Mode. Once the primary announces it is in UNISYNC Mode, repeat on the replica. After the replica announces it is in UNISYNC Mode, press the UNISYNC button once more – the replica should now announce it is using UNISYNC Audio. The primary speaker will show a solid blue light while replicas will show a flashing red and blue light.

Press UNISYNC button again to disable UNISYNC.* Press and hold the UNISYNC button for five seconds to reset the UNISYNC function.**

*If UNISYNC is disabled, Nomad Tempo will disconnect from but remember the replicas connected to it.

**Resetting UNISYNC will enable Nomad Tempo to 'forget' all replica devices.

04.

Extra Controls

LED indicator

Flashing red/blue: Nomad Tempo is in pairing mode. Once the mobile phone is connected/paired, the LED will turn to solid blue.

Blue: When connected via UNISYNC, the Nomad Tempo's LED will be blue while the replica device's LED will be flashing blue/red.

Red: LED will be solid red when charging. Red light will turn off when fully charged.



05.

Specifications

- Unit size: 71.2 x 86.0 x 31.6 mm (L x W x H)
- Weight: 170 grams
- Output power: RMS 3.5W
- S/N ratio: 85db +/- 3db
- Drop proof to 2 metres
- Shock proof
- Frequency range: 90Hz - 20 kHz
- Power source: 3.7V, 900mAh lithium battery
- Playtime: 8 hours from fully charged at 75% volume level
- Charging time: Approximately 2.5 to 3 hours
- Function: Bluetooth/Broadcast/Aux-in/Microphone
- Bluetooth: BT 5.0 version + EDR
- Operating temperature: -10°C to 55°C



06.

Care and Maintenance

Nomad Tempo Bluetooth speaker is intended to be used both indoors and outdoors. The speaker has been tested to IP67 waterproofing and dustproofing standards. IP67 standard allows Nomad Tempo to be submerged in water up to 1 metre for 30 minutes without any damage. However, Nomad Tempo is not intended for constant underwater use.

The speaker will only meet IP67 ratings when side cover is properly locked and sealed. If the side cover is not properly closed, the Nomad Tempo is not dust/waterproof and damage caused may void the warranty. Always make sure the side cover is clean, free of any debris and correctly fitted. Included USB cables are NOT waterproof.

If you notice a muffling of audio after submersion, gently shake Nomad Tempo to clear excess water. If your speaker is exposed to saltwater clean it thoroughly after use with fresh water. Do not apply excessive force to any surfaces of Nomad Tempo when wet or in a wet environment.

Check the rubber seal periodically for premature wear and clean Nomad Tempo with a soft damp cloth and ensure no objects such as dirt, hair or sand are on the rubber seal ring. Do not use any oily solvents or chemicals for cleaning.

07.

Important Safety Information

1. Do not attempt to charge Nomad Tempo when it is wet, or you suspect water has seeped into the device. Thoroughly dry Nomad Tempo and make sure all connections are dry before attempting to open the side cover and connect to a USB cable or power source. Failure to do may result in electrical shock, fire or electrical damage to Nomad Tempo and void the warranty.
2. Do not use Nomad Tempo when you are charging the battery.
3. Do not use Nomad Tempo near any open fire, heat source or excessive heat.
4. Do not open to modify, repair or remove any original component of Nomad Tempo. A qualified technician must carry out repair work. Do not remove the built-in battery or the grill cover. It could cause damage to the device and allow water to enter.
5. Sound levels should be appropriate to your environment and comply with all local regulations. Ensure that you can hear and are aware of any potential hazards around you when you are enjoying your Nomad Tempo.
6. Do not use excessive force with the Nomad Tempo either by squeezing or placing a heavy item on top of the speaker.

08.

Consumer Guarantee

Our Goods come with consumer guarantees under Australia Consumer Law. Under this legislation you are entitled to a replacement or refund for a major failure, and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if they are not of acceptable quality and the failure is not a major failure. If you have any questions about your rights in relation to this product, please return it to point of sale or contact us at www.sproutinc.com.au. For more information about your rights under Australia Consumer Law go to www.accc.gov.au.

Your Nomad Tempo Bluetooth Speaker is warranted to the original owner for 24 months from the date of purchase against defects in material and workmanship under normal use and service. The warranty does not cover misuse of this product and its liability will not exceed the purchase price of the product. If you have any problems while using the product, please do not hesitate to contact our customer support team.

For warranty and technical support please visit sproutinc.com.au or email sproutenquiries@sproutinc.com.au

Thank you for choosing a Sprout product.





Sprout Accessories Pty Ltd

Ph: 07 3624 6666 W: Sproutinc.com.au

E: sproutenquiries@sproutinc.com.au